

Using the iPod Nano

How to access the video after taping

The iPod Nano has a built-in video camera. You can record high-quality video with sound and special effects either in landscape or portrait mode. Videos recorded with the iPod can be imported into our computers in NA 4/216 for sharing and editing. Please ask our MMC student assistant for assistance to import recorded videos.

Basic Functions of the iPod Nano

(Source: iPod Nano Manual at http://manuals.info.apple.com/en_US/iPod_nano_5th_gen_UserGuide.pdf extracted on 9/14/10)

To	Do This
Turn off iPod nano	Press and hold Play/Pause (').
Turn on the backlight	Press any button or use the Click Wheel.
Disable iPod nano controls (so nothing happens if you press them accidentally)	Slide the Hold switch to HOLD (an orange bar appears). Slide the Hold switch to HOLD and back again. Press Menu and the Center button at the same time for about 6 seconds, until the Apple logo appears. Use the Click Wheel to scroll to the item and press the Center button to choose. Press Menu. Press and hold Menu.
Browse for a song	From the main menu, choose Music.
Browse for a video	From the main menu, choose Videos.
Play a song or video	Select the song or video and press the Center button or Play/Pause ('). iPod nano must be ejected from your computer to play songs and videos.
Pause a song or video	Press Play/Pause (') or unplug your headphones.
Change the volume	From the Now Playing screen, use the Click Wheel.
Record video	Choose Video Camera from the main menu. Press the Center button to start or stop recording.
Record video with special effects	Before recording video, press and hold the Center button to display effects, then use the Click Wheel to browse and press the Center button to select. Press the Center button again to start recording.
Play back recorded video	Press the Center button to stop recording, then press Menu to enter the Camera Roll screen. Choose a video and press the Center button to play.
Watch recorded video	From the Videos menu, choose Camera Videos, then select a video and press Play/Pause (').
Delete recorded video	Go to Videos, Camera Videos and select a video from the list, then press and hold the center button until the delete menu appears, choose either Delete or Delete All.